



Asus ROG Strix GL702VM-BHI7N09 Battery Replacement

This guide explains how to remove the battery of the Asus ROG Strix GL702VM-BHI7N09.

Written By: Niko Banks



INTRODUCTION

This guide explains how to remove the battery of the Asus ROG Strix GL702VM-BHI7N09 for replacement. All you have to do is take off a few screws, pretty much.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-


Step 1 — Back Panel




- Flip the laptop over to the back panel, with the serial numbers facing up.
- Using a Phillips #1 screwdriver, remove the ten 12 mm screws from the back panel.

Step 2



 The snap seals don't need a lot of pressure to open, and may break if forced. Be gentle with the opening tool.

- Wedge the sharp edge of the plastic opening tool into the seam between the back panel and the rest of the laptop, then gently pry the panel up.
-  There will be a snapping sound as you remove the back panel, but that is just the seal loosening.
- Continue breaking the seals by sliding the plastic opening tool around the entire laptop under the seam until the back panel is free.
- Once you have broken all the seals, carefully lift the panel off.

Step 3 — Battery



- Using a Phillips #1 screwdriver, remove the one 4 mm screw that is holding the battery.

Step 4



- To remove the battery, lift it away from the center of the computer.
- ⓘ The wire connection to the motherboard will come off with little resistance when the battery is lifted out.

To reassemble your device, follow these instructions in reverse order.

